

C.T. POLARITY TESTER




INSTRUCTION MANUAL




شركة الإنشراح للإمدادات الكهربائية (ذ.م.م.)

AL INSHRAH ELECTRICAL CO. LTD.

P.O. Box 4408, Sharjah, U.A.E, Tel: 00971-6-5432807, Fax:00971-6-5432806,
email: alinshra@emirates.net.ae, web: www.alinshra.com

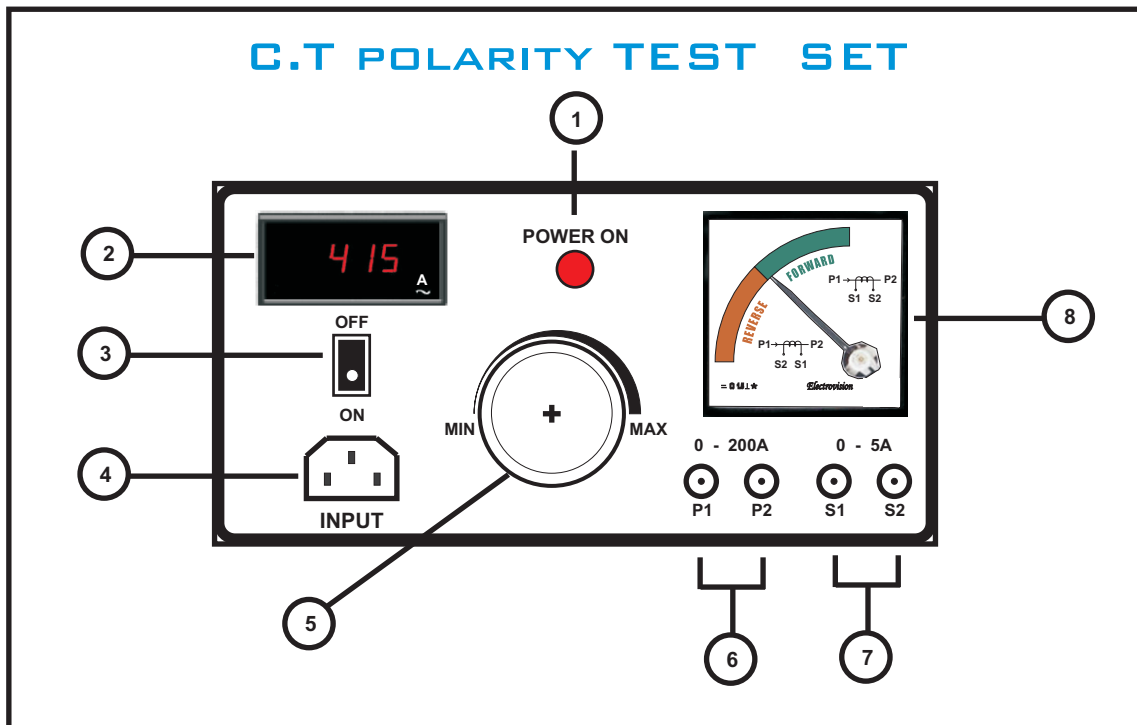

1. Power on indicator
2. Primary current Digital Ammeter 0 - 200A
3. Panel On - Off switch
4. Input power supply 240V/50 - 60Hz
5. Primary current adjustable (min - max) 0 - 200A
6. Primary current to C.T P1 & P2 (0 - 200A)
7. Secondary current from C.T S1 & S2 (0 - 5A)
8. C.T Polarity indication meter (Forward - Reverse)

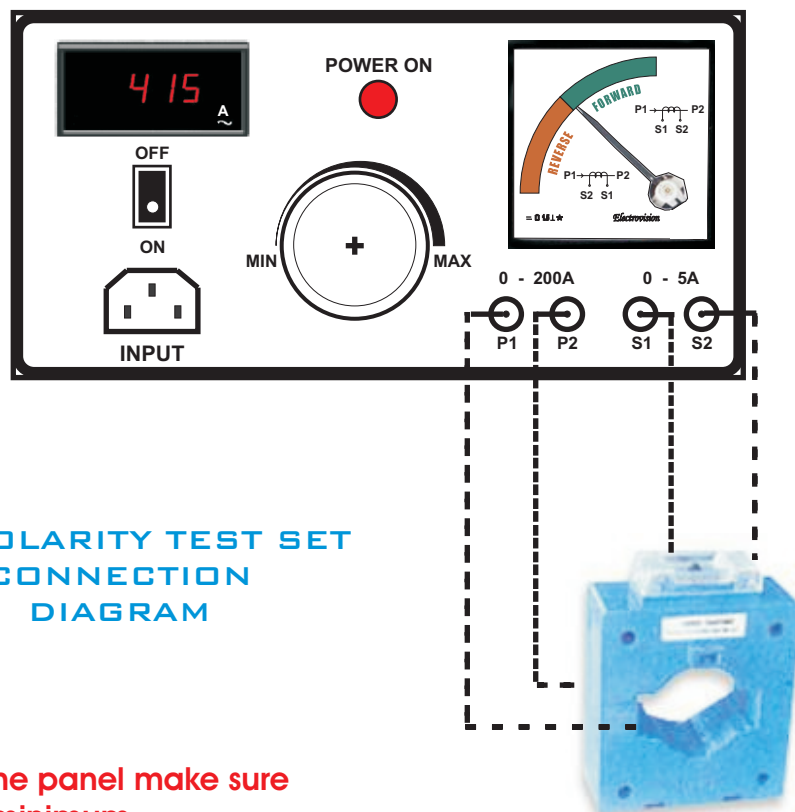

Note: During switching on the panel make sure the output current is set to minimum