

ELCB TESTER




INSTRUCTION MANUAL




شركة الإنشراح للإمدادات الكهربائية (ذ.م.م.)

AL INSHRAH ELECTRICAL CO. LTD.

P.O. Box 4408, Sharjah, U.A.E, Tel: 00971-6-5432807, Fax:00971-6-5432806,
email: alinshra@emirates.net.ae, web: www.alinshra.com

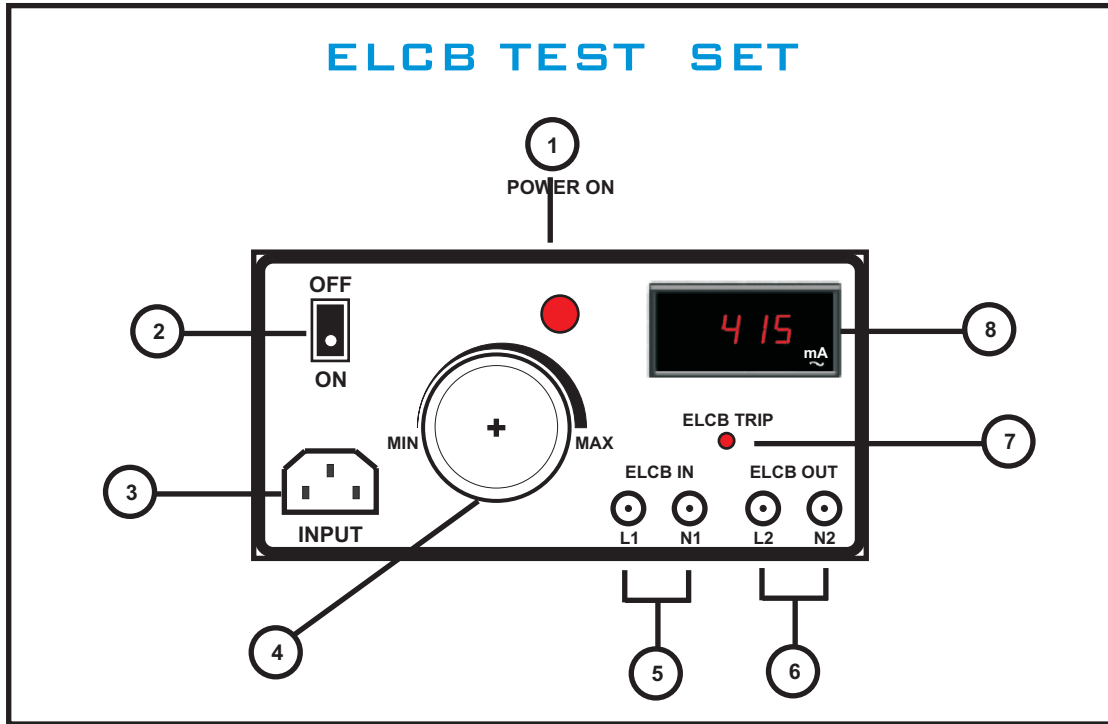

1. Power on indicator
2. Panel On - Off switch
3. Input power supply 240V/50 - 60Hz
4. Current adjustable (min - max) 0 - 1000 mA
5. ELCB - IN Phase (L1) & Neutral (N1)
6. ELCB - OUT Phase (L2) & Neutral (N2)
7. ELCB trip indicator
8. Digital mA meter (Leakage Current)

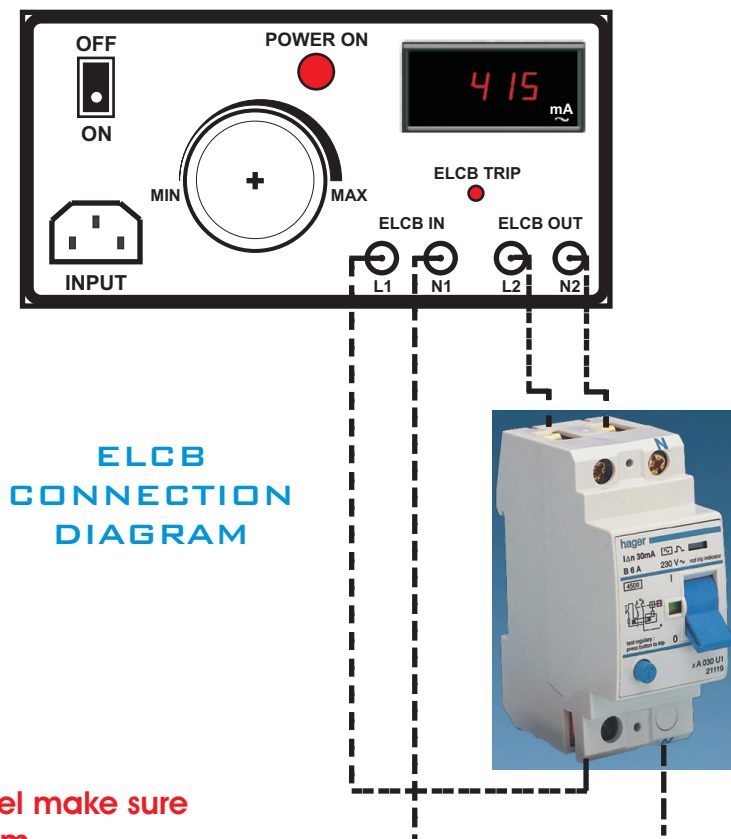

Note: During switching on the panel make sure the output current is set to minimum